IMPORTANT SAFETY INSTRUCTIONS

When using electrical appliances, especially when children are present, basic safety precautions should always be taken, including the following:

READ ALL INSTRUCTIONS BEFORE USING

DANGER – Any appliance is electrically live even when the switch is off.

To reduce the risk of death by electric shock:

1. **Always unplug appliance immediately after using.**
2. Do not place or store appliance where it can fall or be pulled into a tub or sink.
3. Do not place in, or drop into water or other liquids.
4. If an appliance falls into water, unplug it immediately. **Do not reach into the water.**

WARNING – To reduce the risk of burns, electrocution, fire, or injury to persons:

1. **This appliance should never be left unattended when plugged in.**
2. This appliance should not be used by, on, or near children or individuals with certain disabilities. Unsupervised use could result in fire or personal injury.
3. Use this appliance only for its intended use as described in this manual. Do not use attachments not recommended by the manufacturer.
4. **Never operate this appliance if it has a damaged cord or plug, if it is not working properly, or if it has been dropped or damaged, or dropped into water. Do not attempt to repair the appliance. Incorrect reassembly or repair could cause a risk of fire, electric shock, or injury to persons when the appliance is used. Return the appliance to an authorized service center for examination and repair.**
5. Keep the cord away from heated surfaces. Do not allow cord to touch heated surfaces. Do not pull or twist cord. Let appliance cool completely before putting away.
6. This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug will fit in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.
7. Never drop or insert any object into any opening or hose.
8. Do not use outdoors or operate where aerosol (spray) products are being used or where oxygen is being administered.
9. Do not use an extension cord to operate appliance.
10. Surfaces of this appliance may be hot when in use. Do not let heated surfaces touch eyes or skin.
11. Do not place the steam nozzle directly on any surface or on the appliance power cord while it is hot or plugged in. Use the stand provided.
12. Unplug this appliance before filling or emptying. Do not overfill.
13. While emitting steam, this appliance may cause burns if it is used too close to the skin, scalp or eyes, or if it is used incorrectly. To reduce the risk of contact with hot water discharging from steam vents, test appliance before each use by holding it away from body.
14. Do not operate steamer without properly filling the water tank.
15. Always keep the hose and nozzle elevated above the water tank.
16. Never yank cord to disconnect from outlet. Instead, grasp plug and pull to disconnect.
17. Burns could occur from touching hot metal parts, hot water, or steam. Use care when removing water tank or when you turn a steam appliance upside down – there may be hot water in reservoir.
18. To reduce likelihood of circuit overload, do not operate another high-wattage appliance on the same circuit.
19. If an extension cord is absolutely necessary, a 15 ampere rated cord should be used. Cords rated for less amperage may overheat. Care should be taken to arrange the cord so that it cannot be pulled or tripped over.
20. Always remove the water tank from the appliance before filling it with water.
21. When changing attachments, please be sure the unit is off and no steam is being released in order to avoid contact with hot water.
22. Use caution when changing attachments, as they may contain hot water from condensation. Ensure the attachments are dry or cooled off, to avoid contact with hot water.

SAVE THESE INSTRUCTIONS

FOR HOUSEHOLD USE ONLY

UNPACKING INSTRUCTIONS

Place the box on a large, sturdy flat surface. Carefully remove the appliance from the packing material. Keep all plastic bags away from children.

STEAMER ASSEMBLY

Attaching the Telescopic Pole and Rotating Hanger

Insert the bottom of the larger metal telescopic pole into the holder on the unit base and screw the set screw until tight. (Caution: Do not over-tighten.)

Extend the telescopic pole and hang the steam nozzle from the rotating handle. Hose may be stiff upon removal from box. **Hose will relax after initial use. Handle will sit properly on pole support once hose is relaxed.**

TURNING STEAMER ON



1. Push the On/Off switch on base of unit to On – red light will go on (A).
2. The unit will heat up in approximately 100 seconds and will be ready to use when green light is on (B).
3. Push button on T-nozzle – light will go on and steam will start. **Always hold the nozzle about ½ inch from fabric while steaming.**

USING ROTATING HANGER

This unit comes with a rotating hanger. To use the hanger, simply place on top of pole firmly. It is now in place to rotate 360°. Hang your garment and steam away wrinkles. Turn as you wish.

USING PANT CLIP SYSTEM

This fabric steamer is equipped with a pant clip system for holding pants taut for faster and more effective steaming.

Attach the top pants clip bar to the rotating hanger by inserting mounting pegs into the hanger's two keyhole openings. Push in and pull down to lock.

The bottom clips can be adjusted by loosening the knob (on the telescopic pole) and moving the pole up and down, depending upon the length of pants. Clip pants as shown and steam. **Please note: some pants may be too long to use the bottom clips. If that is the case, just simply use the top clips and let your pants hang freely.**



OPERATING INSTRUCTIONS

FILLING THE WATER TANK (PRIOR TO PLUGGING IN THE APPLIANCE)

Remove the water tank using handle on front of tank. Fill reservoir using opening on top of tank by holding it under a source of cold running water until it is filled to the desired level. Do not overfill. Position the water tank on the base and make certain it is seated properly in the unit.

DO NOT FILL THE TANK WITH HOT WATER. DISTILLED OR FILTERED WATER IS BEST.

OPERATING THE STEAMER

1. Make sure the On/Off switch is in the Off position.
2. Make sure all hose connections are secure and tight.
3. Make sure the telescopic pole is fully extended and the hose is not twisted, kinked, damaged or cracked.
4. Plug the steamer cord into a normal electrical outlet.
5. Push the main On/Off switch at the base of unit to turn on.
6. The light will go on to indicate power is on.
7. Steam will be produced from the nozzle in about 100 seconds.
8. To turn the steamer off, push the On/Off switch again.
9. Clean water tank easily by removing cap at bottom. Flush and clean as needed. Empty the tank when unit not in use.

ATTACHMENTS

Both bristle brush and creaser attachments easily snap on and off the steam nozzle. Simply line up at base of nozzle and push firmly to attach.

Bristle brush attachment

Creaser Attachment

GET TO KNOW YOUR STEAMER

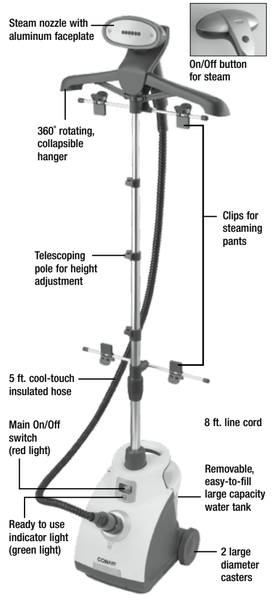
Steam nozzle with aluminum faceplate
On/Off button for steam
360° rotating, collapsible hanger
Clips for steaming pants
Telescoping pole for height adjustment
5 ft. cool-touch insulated hose
8 ft. line cord
Main On/Off switch (red light)
Removable, easy-to-fill large capacity water tank
Ready to use indicator light (green light)
2 large diameter casters

MEDIDAS DE SEGURIDAD IMPORTANTES INSTRUCCIONES

Siempre que use aparatos eléctricos, especialmente en la presencia de niños, debe tomarse precauciones básicas de seguridad, entre las cuales las siguientes:

LEA TODAS LAS INSTRUCCIONES ANTES DE USARLO

PELIGRO – Cualquier aparato enchufado permanece bajo tensión, aunque esté apagado.

Para reducir el riesgo de muerte o herida por descarga:

1. **Siempre desconecte el aparato inmediatamente después de usarlo.**
2. No coloque ni guarde este producto donde pueda caer o ser empujado a una bañera o un lavabo.
3. No coloque el aparato ni lo deje caer al agua o otro líquido.
4. Si el aparato cayera al agua, desconéctelo inmediatamente. **No toque el agua.**

ADVERTENCIA – Para reducir el riesgo de quemaduras, electrocución, incendio o heridas:

7. Nunca deje caer ni inserte ningún objeto en ninguna de las aberturas del aparato.
8. No lo utilice en exteriores, ni lo haga funcionar donde se estén usando productos en aerosol (spray) o donde se esté administrando oxígeno.
9. No utilice una extensión con este aparato.
10. La superficie de este aparato puede volverse muy caliente durante el uso. Mantenga los ojos y la piel alejados de las superficies calientes.
11. No coloque la boquilla en ninguna superficie mientras esté caliente o mientras el aparato esté conectado. Mantenga alejada del cable eléctrico. Utilice el soporte incluido.
12. Desconecte el aparato antes de llenar el depósito de agua. No sobrelleve el depósito.
13. El vapor que sale de la boquilla es muy caliente. Siga las instrucciones de uso al pie de la letra y no permita que el vapor haga contacto con la piel, el cuero cabelludo o los ojos. Para reducir el riesgo de quemadura, pruebe el vapor lejos de su cuerpo antes de usarlo.
14. Nunca utilice el aparato con el depósito de agua vacío.
15. Siempre mantenga la boquilla y la manguera más arriba del depósito.
16. Nunca jale el cable para desconectar el aparato. Agárrelo por la clavija.
17. Las partes de metal calientes, el agua caliente y el vapor pueden causar heridas. Tenga cuidado al vaciar el depósito de agua o al voltear el aparato, puesto que el depósito puede contener agua caliente.
18. Para evitar una sobrecarga eléctrica, no conecte otro aparato de alta potencia en el mismo circuito eléctrico.
19. Si debe usar el aparato con una extensión, utilice una extensión de 15 amperios. Una extensión de menor amperaje podría calentar excesivamente. Colóquelo la extensión de tal manera que nadie la pueda jalar o tropezar con ella.
20. Siempre retire el depósito de agua de la base antes de llenarlo.
21. Asegúrese de que el aparato esté apagado y no esté emitiendo vapor antes de cambiar los accesorios.
22. Cambie los accesorios con cuidado, puesto que podrían estar calientes o contener agua caliente. Asegúrese de que los accesorios estén secos y fríos antes de manipularlos.

GUARDE ESTAS INSTRUCCIONES

PARA USO DOMÉSTICO SOLAMENTE

DESEMPACADO

Ponga la caja sobre una superficie espaciosa, llana y segura. Retire el aparato del material de embalaje. Mantenga las bolsas de plástico fuera del alcance de los niños.

ENSAMBLADO

Ensamblado del soporte telescópico y de percha giratoria

ENSAMBLADO

Inserte la parte inferior del soporte telescópico en la base del aparato y apriete el tornillo de metal para sujetarlo. Precaución: No lo apriete demasiado.

Extienda el soporte telescópico e instale la boquilla sobre el gancho. Puede que la manguera esté rígida al principio. **Despues de usarla, se relajará. La boquilla encajará entonces en el soporte.**

OPERACIÓN BÁSICA

1. Oprima el botón de encendido que se encuentra sobre el luminoso rojo (A) se encenderá.
2. El aparato empezará a calentar. Cuando esté listo, el indicador luminoso verde (B) se encenderá.
3. Oprima el botón ubicado sobre la boquilla para producir vapor. **Sostenga la boquilla a aproximadamente ¾ pulgada (1.5 cm) de la tela.**

PERCHA GIRATORIA

La percha giratoria permite colgar las prendas, para desarrugarlas sin esfuerzo. Para instalar la percha, encájela firmemente sobre el soporte telescópico. Para mayor comodidad, la percha gira 360°. Simplemente cuelgue su ropa y desarrúguela girando la percha a gusto.

SISTEMA PARA COLGAR LOS PANTALONES

Este desarrugador de prendas incluye un sistema de pinzas móviles para colgar y estirar los pantalones, lo que permite lograr un desarrugado más rápido y efectivo.



LLENADO DEL DEPÓSITO (ANTES DE CONECTAR EL APARATO)

Retire el depósito de agua de la base, agarrándolo por el asa. Llene el depósito con agua fría, hasta el nivel deseado. No sobrelleve el depósito. Colóquelo el depósito sobre la base, y compruebe que esté bien fijo.

Instale las pinzas superiores sobre la percha giratoria, introduciendo las estabilitas en los orificios en la percha. Presione, y luego jale hacia abajo para sujetar.

NO LLENE EL DEPÓSITO CON AGUA CALIENTE.

LE RECOMENDAMOS QUE USE AGUA DESTILADA O FILTRADA.

FUNCIONAMIENTO DEL APARATO

1. Asegúrese de que el botón de encendido/apagado esté en la posición "OFF".
2. Asegúrese de que la manguera esté debidamente conectada.
3. Asegúrese de que el soporte telescópico esté completamente extendido y que la manguera esté recta.
4. Enchufe el cordón en una toma de corriente.
5. Encienda el aparato, poniendo el botón de encendido/apagado en la posición "ON".
6. La luz roja se encenderá, lo que indica que el aparato está calentando.
7. El aparato empezará a producir vapor después de aproximadamente 1 minuto y 40 segundos.
8. Para apagar el aparato, oprima el botón de encendido/apagado otra vez.
9. Para limpiar el depósito de agua, simplemente retire el tapón que se encuentra debajo de este. Vacíelo y limpielo según se necesite. Vacíe el depósito de agua cuando no use el aparato.

Accesorio para formar la raya de los pantalones

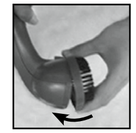

Cepillo duro



ACCESORIOS

El cepillo y el accesorio para formar la raya de los pantalones son fáciles de instalar. Simplemente haga coincidir el accesorio con la boquilla y presione firmemente para sujetar.

FAMILIARÍCESE CON SU DESARRUGADOR DE PRENDAS

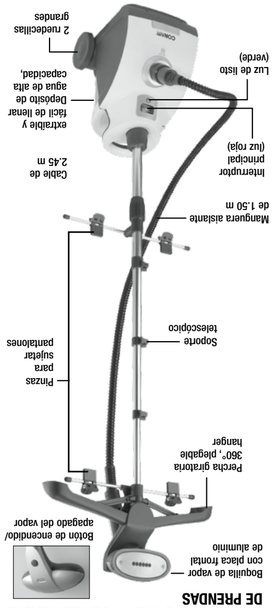
Boquilla de vapor con placa frontal de aluminio
Botón de encendido/apagado del vapor
Percha giratoria 360°, plegable
Soporte telescópico
Pinzas para sujetar pantalones
Manguera aislante de 1.50 m
Cable de 2.45 m
Interruptor principal (luz roja)
extraíble y fácil de limpiar
Depósito de agua de alta capacidad,
Luz de listo (verde)
2 ruedecillas giratorias

EXTREMESTEAM™
FABRIC STEAMER
with DUAL HEAT

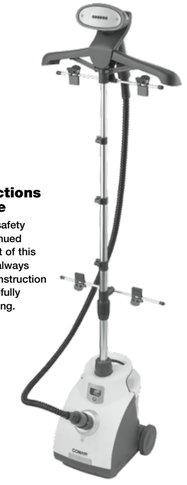

Instructions for Use

For your safety and continued enjoyment of this product, always read the instruction book carefully before using.

CONAIR®

Model GS75

Please register this product at:
www.conair.com/registration

Service Center
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

For information on any Conair product call:
1-800-3-CONAIR or visit us on the web at
www.conair.com

©2011 Conair Corporation
East Windsor, NJ 08520/Glendale, AZ 85307

11PA121683

IB-11045

LIMITED ONE-YEAR WARRANTY

Conair will repair or replace (at our option) your unit free of charge for 12 months from the date of purchase if the appliance is defective in workmanship or materials.

To obtain service under this warranty, return the defective product to the service center listed, together with your purchase receipt and $3.00 for postage and handling. California residents need only provide proof of purchase and should call 1-800-366-0937 for shipping instructions. In the absence of a purchase receipt, the warranty period shall be 12 months from the date of manufacture.

ANY IMPLIED WARRANTIES, INCLUDING BUT NOT LIMITED TO THE IMPLIED WARRANTY OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, SHALL BE LIMITED IN DURATION TO THE 12-MONTH DURATION OF THIS WRITTEN, LIMITED WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you.

IN NO EVENT SHALL CONAIR BE LIABLE FOR ANY SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES FOR BREACH OF THIS OR ANY OTHER WARRANTY, EXPRESS OR IMPLIED, WHATSOEVER. Some states do not allow the exclusion or limitation of special, incidental, or consequential damages, so the above limitation may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state.

NOTE: Amounts of chemicals in water will vary in different areas. To ensure continued operation of the steamer, never store without cleaning and removing excess water from the reservoir and water tank.

TROUBLESHOOTING THE STEAMER

- PROBLEM - Steamer fails to heat
  CAUSE - Steamer not plugged in
  SOLUTION - Plug into electrical outlet
- PROBLEM - No steam
  CAUSE - Water level is low (beep will sound)
  SOLUTION - Turn On/Off switch off and refill water tank
- PROBLEM - Water drips from nozzle
  CAUSE - Condensation in hose
  SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Nozzle gurgles
  CAUSE - Condensation in hose
  SOLUTION - Hold the hose vertically and allow water to drain back into unit
- PROBLEM - Poor steam performance
  CAUSE - Sediment in tank
  SOLUTION - Decalcify reservoir and water tank. See decalification instructions.
- PROBLEM - Dye on T-nozzle
  CAUSE - Fabric not colorfast / Touching T-nozzle to fabric
  SOLUTION - Move T-nozzle 1/2 inch away from fabric during use. Clean T-nozzle with household cleaner and rinse with soap and water
- PROBLEM - Discoloring of fabric
  CAUSE - Dye on surface of fabric needs specialty treatment and cleaning / Fabric not suitable for steaming
  SOLUTION - Some custom specialty fabrics have dyes that are NOT COLORFAST and are not suitable for steaming. Test fabric for colorfastness in an inconspicuous spot before steaming.

Always steam with hose in upright position, so any condensation is free to flow back into the steamer. Always hold the nozzle about ½ inch from fabric while steaming.

If you steam in a low position, condensation will collect inside the hose. This will cause gurgling and some water droplets to form near the steam jets on the handle. To avoid this, frequently lift the steam handle upward until the hose is extended to its full height.

TO STEAM DRAPES

Wash and dry drapes as directed, according to fabric type. Rehang drapes and steam when they are in place

CAUTION: Hose will be hot when in use. Avoid prolonged contact.

HOW TO STEAM

Grasp the handle of the steam nozzle with the steam jets facing away from you. Begin at the bottom of the fabric to allow the steam to rise inside and outside, removing wrinkles. Slowly move the nozzle from the bottom to the top of the fabric. Remove the nozzle from the garment and smooth the fabric with your free hand. Some fabrics are best steamed on the underside of the material. This will allow the fibers of the fabric to relax, eliminating wrinkles.

NOTE: Test fabric for color fastness in an inconspicuous spot. Drape linens, towels, handkerchiefs and napkins over a rod or place on a towel rack.

Heavier fabrics may require repeated steaming. Repeat as necessary.

With practice, you will gain speed and efficiency. You will soon learn which fabrics require multiple steam applications.

Do not directly touch velvet or silk with the steam head.

GARANTÍA LIMITADA DE UN AÑO

Conair reparará o remplazará (a su opción) su aparato sin cargo por un período de 12 meses a partir de la fecha de compra si presentara defectos de materiales o fabricación. Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, de este tipo de tela no pueden ser descargados con vapor. Haga una prueba en un área discreta de la tela antes de desarrugar la prenda.

NOTA: El agua de la llave puede tener un alto contenido en minerales. Para lograr un desempeño óptimo, vacíe el agua y el depósito internos después de cada uso.

RESOLUCIÓN DE PROBLEMAS

- PROBLEMA - El aparato no calienta
  CAUSA - El aparato no está enchufado
  SOLUCIÓN - Enchufe el cordón en una toma de corriente
- PROBLEMA - El aparato no produce vapor
  CAUSA - El nivel de agua está bajo (se escuchará un pitido)
  SOLUCIÓN - Apague (OFF) el aparato y llene el depósito
- PROBLEMA - Gotas de agua salen de la boquilla
  CAUSA - Condensación en la manguera
  SOLUCIÓN - Alce la manguera para que el agua baje
- PROBLEMA - La boquilla bortota
  CAUSA - Condensación en la manguera
  SOLUCIÓN - Alce la manguera para que el agua baje
- PROBLEMA - El aparato produce poco vapor
  CAUSA - Depósitos de sarro
  SOLUCIÓN - Elimine el sarro Véase la sección "Eliminación del sarro"
- PROBLEMA - Tintura sobre la boquilla
  CAUSA - Tela que destiñe al tocarla con la boquilla
  SOLUCIÓN - Sostenga la boquilla a ½ pulgada (1.5 cm) de la tela durante el uso. Limpie la boquilla con limpiador y enjuague en agua jabonosa.
- PROBLEMA - La tela destiñe
  CAUSA - La tintura usada para teñir la tela no está sellada
  SOLUCIÓN - La tintura usada para teñir ciertas fibras DESTINE. Las prendas hechas

PRECAUCIÓN: La manguera se vuelve muy caliente durante el uso. Evite tocarla.

CONSEJOS PARA DESARRUGAR CORTINAS

Lave y seque las cortinas según las instrucciones del fabricante. Vuelva a colgar las cortinas antes de desarrugarlas.

Siempre sostenga la boquilla recta y alta, para que la condensación baje hacia el depósito. Sostenga la boquilla a aproximadamente ½ pulgada (1.5 cm) de la tela.

Si la manguera no estuviera recta, condensación podría acumularse adentro de la manguera, haciendo que ésta gorgotee y que salga salga de la boquilla. Si ésto ocurriera, simplemente alce la manguera hasta que quede completamente extendida.

NOTA: Haga una prueba en un área discreta de la tela antes de desarrugar la prenda. Se hará más fácil desarrugar toallas, servilletas y manteles si están colgados en una barra.

Las telas densas pueden necesitar más de una pasada. Repita cuantas veces sea necesario.

Con práctica, desarrugar prendas se volverá más fácil y rápido cada vez y usted aprenderá cuál telas necesitan varias pasadas.

No permita que la boquilla haga contacto con seda o tericiopelo.

ELIMINACIÓN DEL SARRO

Si nota el depósito de agua con los orificios frente a la prenda. Mueva la boquilla lentamente desde abajo hasta arriba, por dentro y por fuera. Para terminar, aleje la boquilla y alise la tela con la palma de su mano. Algunos tejidos son más fáciles de desarrugar por dentro. Esto relaja las fibras, lo que ayuda a eliminar las arrugas.

CÓMO DESARRUGAR PRENDAS

Sostenga la boquilla con los orificios frente a la prenda. Mueva la boquilla lentamente desde abajo hasta arriba, por dentro y por fuera. Para terminar, aleje la boquilla y alise la tela con la palma de su mano. Algunos tejidos son más fáciles de desarrugar por dentro. Esto relaja las fibras, lo que ayuda a eliminar las arrugas.

NOTA: Haga una prueba en un área discreta de la tela antes de desarrugar la prenda. Se hará más fácil desarrugar toallas, servilletas y mantles si están colgados en una barra.

Las telas densas pueden necesitar más de una pasada. Repita cuantos veces sea necesario.

Con práctica, desarrugar prendas se volverá más fácil y rápido cada vez y usted aprenderá cuál telas necesitan varias pasadas.

No permita que la boquilla haga contacto con seda o tericiopelo.

LIMPIEZA Y ALMACENAJE

1. Apague (OFF) y desconecte el aparato antes de limpiarlo.
2. Permita que el aparato enfríe durante 30 minutos o más.
3. Desconecte el cordón de la toma de corriente.
4. Retire el depósito de agua de la base, abra la tapa y tire el agua remanente. Permita que seque al aire libre.
5. Replieque el soporte telescópico.
6. Vuelva a instalar el depósito de agua.
7. Guarde el aparato.

DECALCIFICATION

If the appliance begins to produce steam more slowly than usual or stops producing steam and then starts again, you may need to decalcify your steamer. Decalcification refers to removing the calcium deposits that form over time on the metal parts of the steamer. For best performance from the Conair® Extreme Steam™ Fabric Steamer, decalcify the unit from time to time. The frequency depends upon the hardness of your tap water and how often you use the steamer.

To decalcify, use a solution of 1/3 white vinegar and 2/3 water in the water tank. Replace the water tank in the unit. Plug the unit into electrical outlet. Turn to the On position and run until half the amount has steamed (1 liter). Turn the unit to the Off position, unplug from electrical outlet, and allow to sit for 30 minutes. Remove water tank.

Repeat the above procedure as many times as necessary until a normal steam rate returns, usually 2–3 times. With each repeated cycle, use a fresh solution of vinegar and water. Run one cycle of fresh, cold water without vinegar through the unit at the completion of decalcification before using the unit again to steam garments.

CLEANING AND STORING

1. Turn the On/Off switch to the Off position and unplug from the power source.
2. Wait for the steamer to cool completely for at least 30 minutes.
3. Unplug power cord.
4. Remove the water tank from unit, open top cover and empty unused contents. Allow to air dry.
5. Collapse telescopic hanger rod.
6. Replace water tank.
7. Store the unit.

EXTREMESTEAM™
DESARRUGADOR DE PRENDAS
con DOS RESISTENCIAS

Esta garantía le otorga derechos legales específicos y usted puede tener otros derechos que varían de un Estado a otro.

Para obtener servicio técnico bajo esta garantía, regrese su aparato al Centro de Servicio indicado a continuación, junto con su recibo de compra y un cheque o giro postal de US$3.00 por gastos de manejo y envío. Los residentes de California solo necesitan dar una prueba de compra y deben llamar al 1-800-366-0937 para recibir instrucciones de envío. En ausencia del recibo de compra, el período de garantía será de 12 meses a partir de la fecha de fabricación.

CUALQUIER GARANTÍA, OBLIGACIÓN O RESPONSABILIDAD IMPLÍCITAS, INCLUYENDO PERO NO LIMITADAS A LA GARANTÍA IMPLÍCITA DE COMERCIABILIDAD Y APTITUD PARA UN PROPÓSITO ESPECÍFICO, ESTARÁN LIMITADAS POR LOS 12 MESES DE LA PRESENTE GARANTÍA ESCRITA. Algunos Estados no permiten limitaciones sobre la duración de una garantía implícita, de modo que las limitaciones mencionadas pueden no regir para usted.

CONAIR NO SERÁ RESPONSABLE, EN NINGÚN CASO, POR NINGÚN DAÑO ESPECIAL, INCIDENTAL O CONSECUENTE DEBIDO AL INCUMPLIMIENTO DE ESTA O CUALQUIER OTRA GARANTÍA, EXPRESA O IMPLÍCITA. Algunos Estados no permiten la exclusión o limitación de daños especiales, incidentales o consecuentes, de modo que las limitaciones mencionadas pueden no regir para usted.

Para más información sobre los productos Conair, llame al: 1-800-3-CONAIR o visítenos en www.conair.com

©2011 Conair Corporation
East Windsor, NJ 08520/Glendale, AZ 85307

11PA121683

IB-11045

Para registrar su producto, visítenos en: www.conair.com/registration

Centro de servicio
Conair Corporation
Service Department
7475 N. Glen Harbor Blvd.
Glendale, AZ 85307

Instrucciones de uso

Para su seguridad y para disfrutar plenamente de este producto, siempre lea las instrucciones cuidadosamente antes de usarlo.

CONAIR®

Modelo GS75